


Сервер диспетчеризации LKDSDomain.

- **Настройка перенаправления вызова из лифта на SIP номер.**


В SPult, запущенный Администратором, введем нового пользователя:

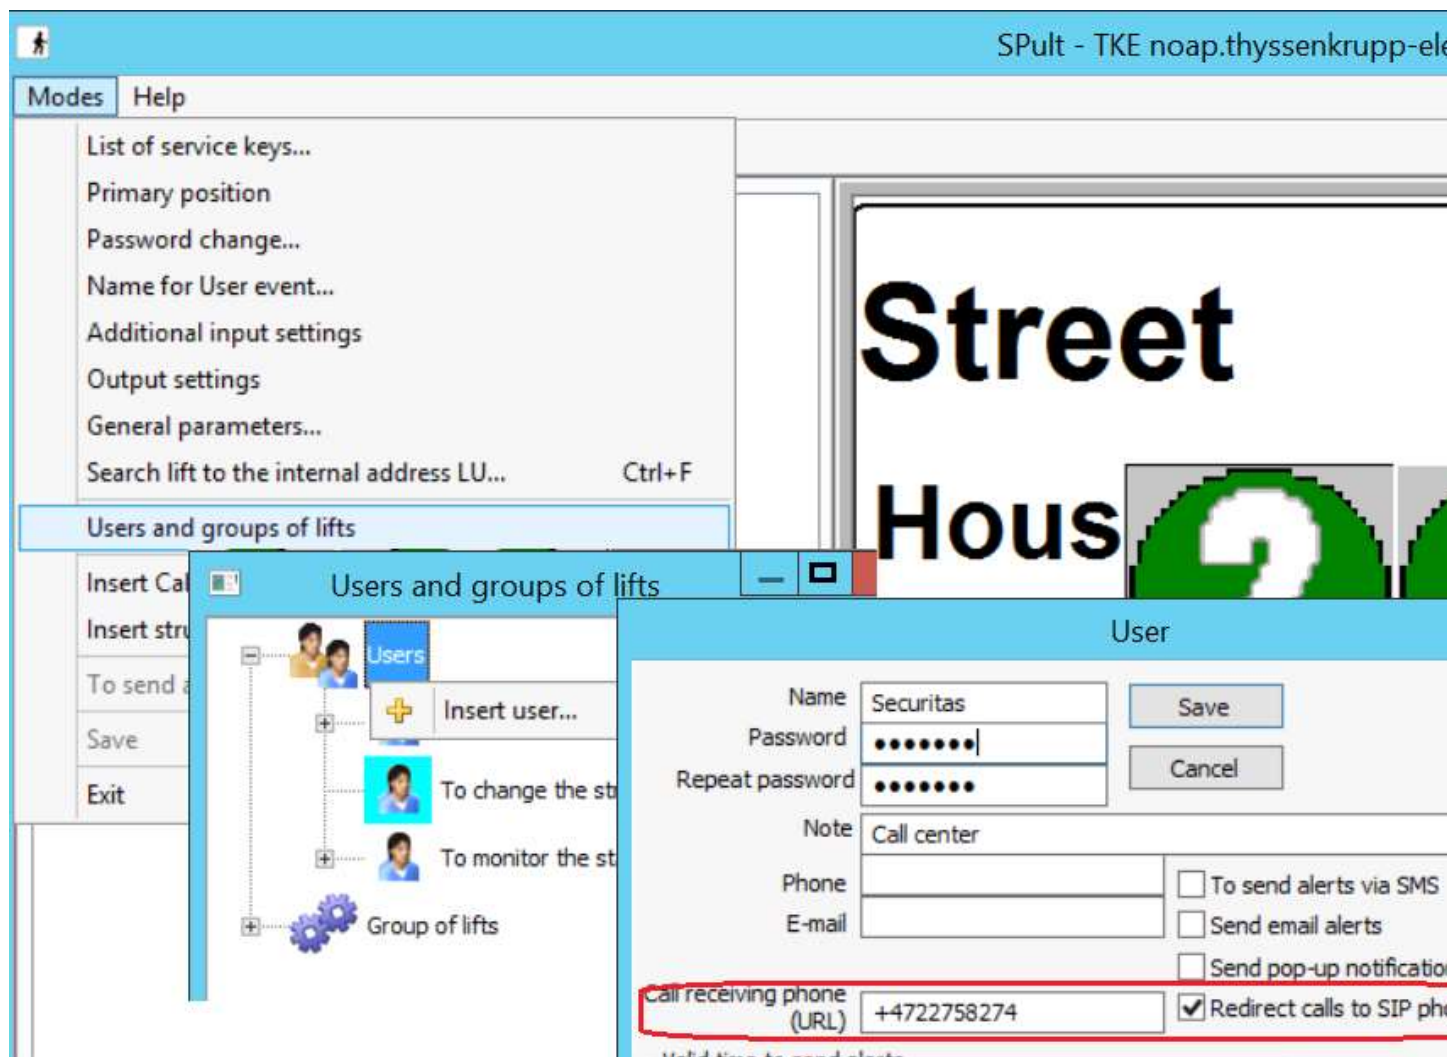


Добавим ему доступ к группе лифтов и следующие права:




И оповещение о вызове с лифта:

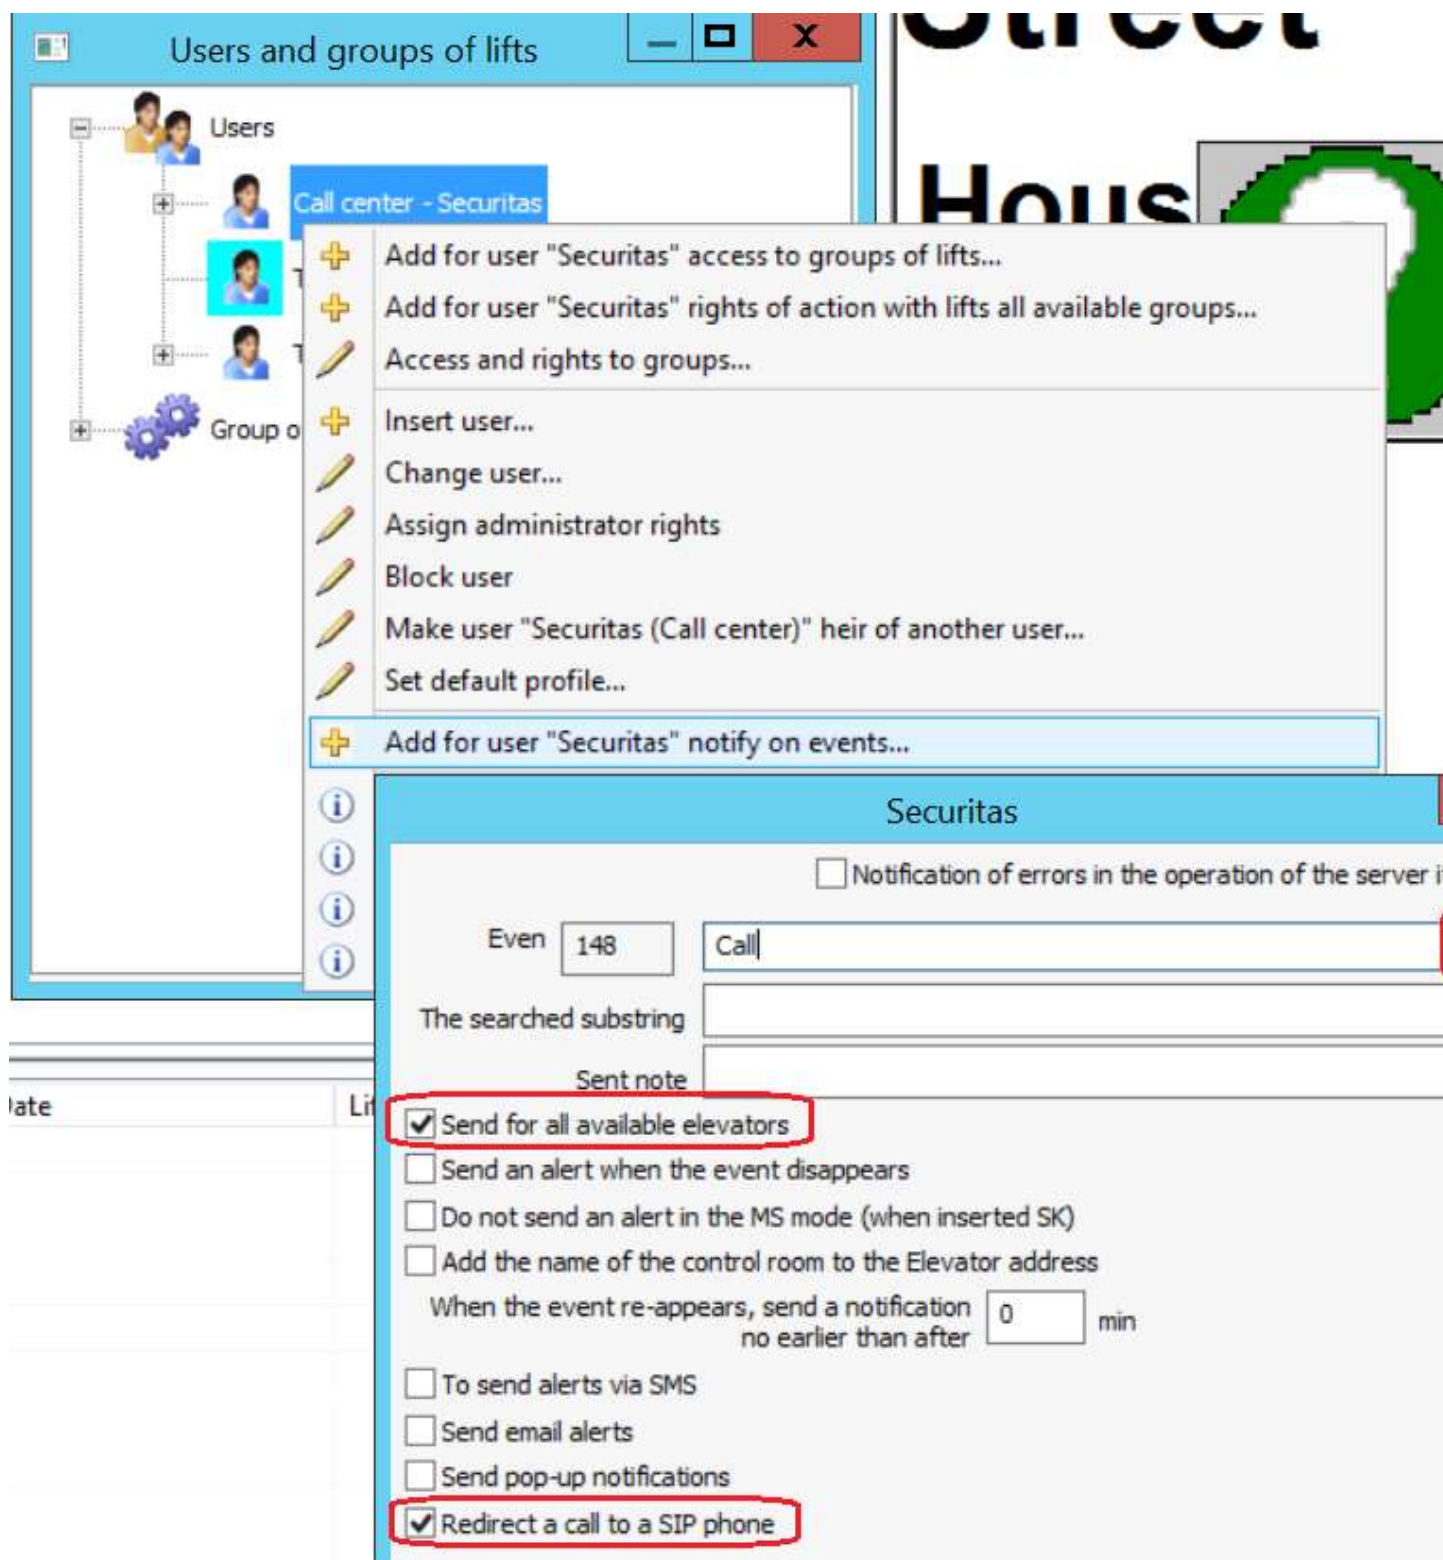

Вызов из лифта будет переправлен на номер +4722758274:

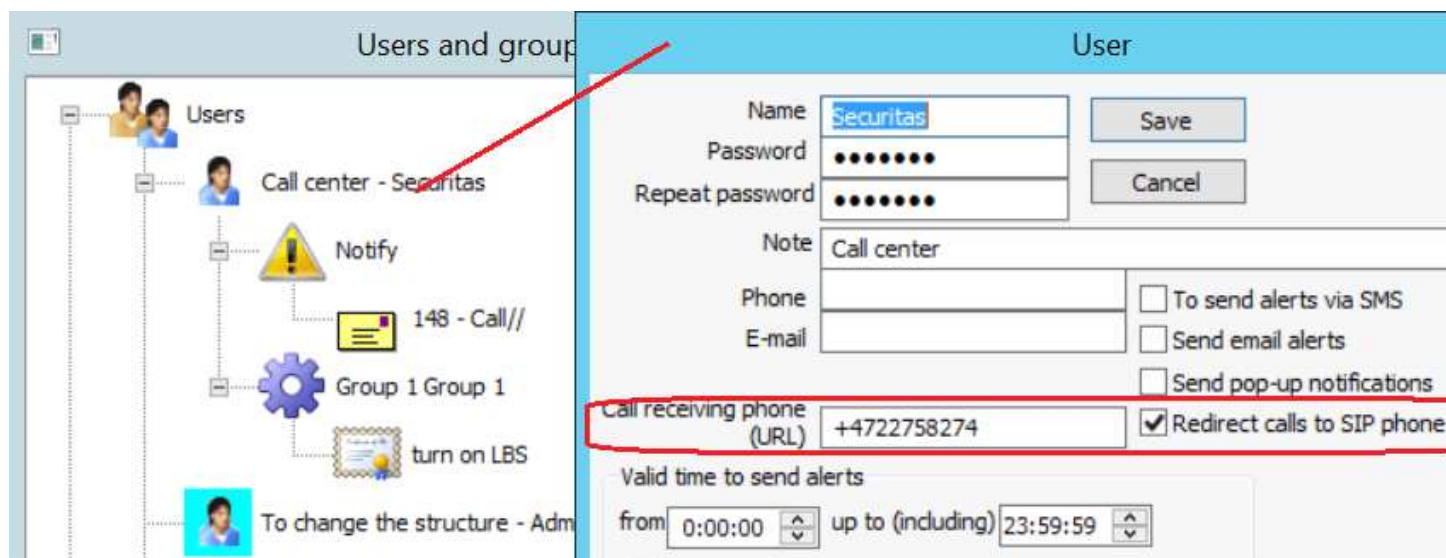

От номера, заданного в дополнительных параметрах лифта:

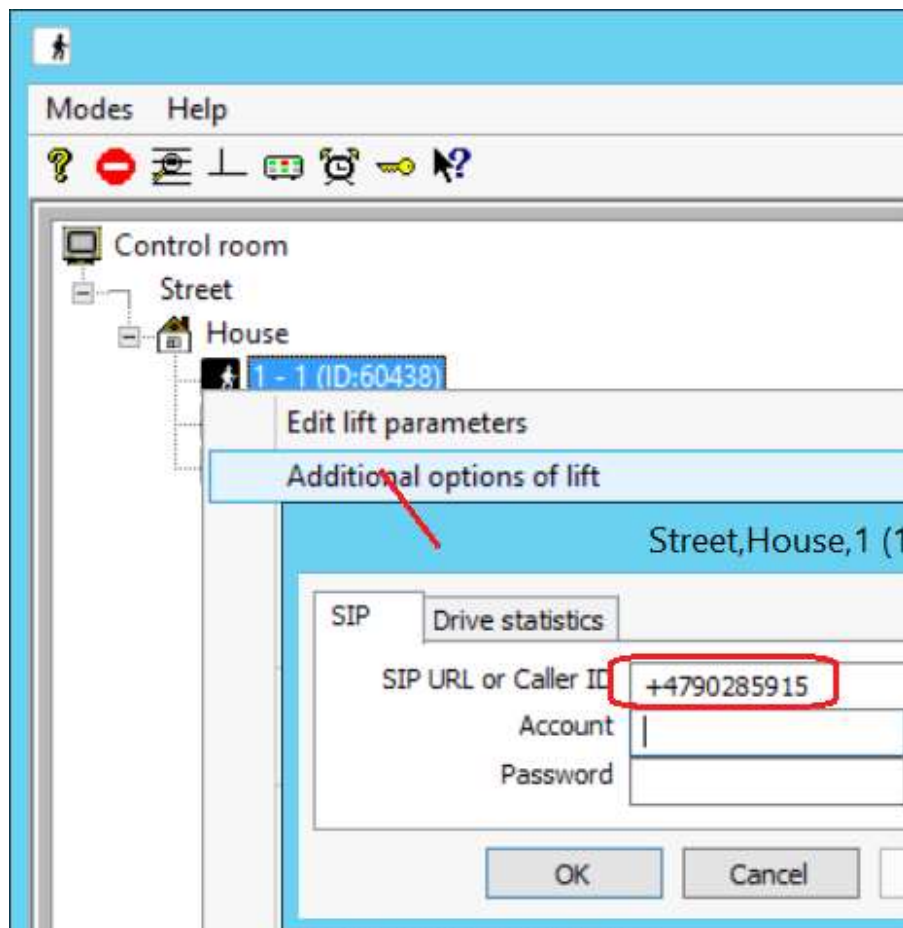

Через SIP сервер, параметры которого заданы в LKSDomainCfg, параметры SIP сервера нужно узнать у провайдера (МТС, Ростелеком и т.п.):

Lift units User teams Structure

SQL server options

Server name ☐ Windows AuthenticationUser name Password ☒ SQL user only has rights to LKDSDOMAIN databaseODBC driver

Network connection settings

IP address Don1.IP ☐ Don2.IP ☐ UDP data port for communication with LU UDP voice port for communication with LU UDP port for communication with *SPult TCP port for communication with *SPult Identifier for communication with LU

OPC UA server parameters

Name Port Security Encryption key password Log exchange only with (Ident) ☒ Send server time zone to clients

Options for sending SMS messages

☐ Enable sending SMS messagesModem COM port SMS center

E-mail sending options

☐ Enable sending E-mail messages☐ Use SSLSMTP server SMTP port Authorization name Password for authorization Sender address

Pop-up notification settings

☐ To enable sending notifications

Web connection settings

☐ Accept WEB connectionsHTTP port HTTPS port ☐ Allow non-secure connection

SIP telephony parameters

☒ Enable redirecting calls from LU to SIP phonesDomain Login Password